




How to Measure for a Door Surround

1. Measure the threshold of the door frame from tip to tip (A) and put that dimension on the form.

2. Measure the left side of the door frame from tip to tip (B) and put that dimension on the form.

3. Measure the right side of the door frame from tip to tip (C) and put that dimension on the form.

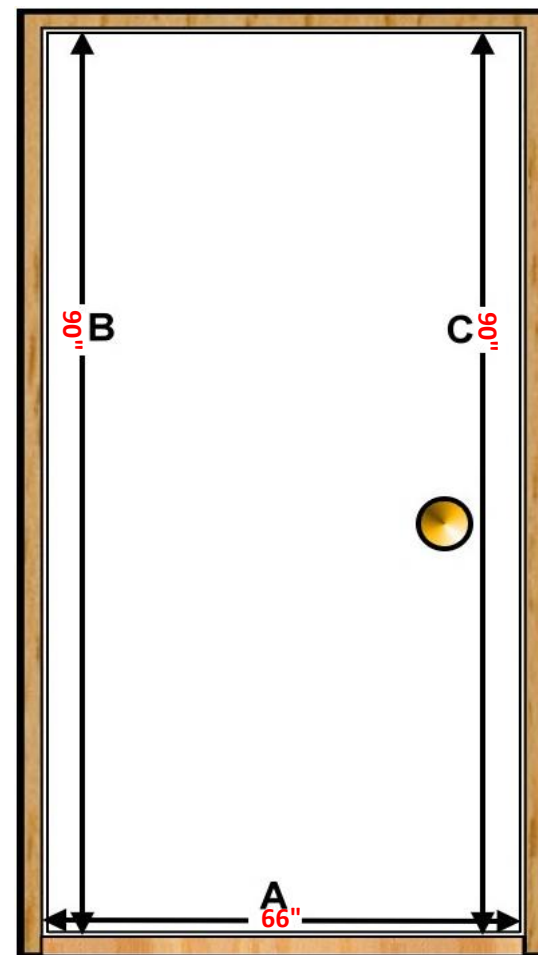

Sample Line

Product Part #	Door Frame Measurements	Check All That Apply	Quantity	Type of Door	Type of Siding
DS-9	(A: <u>66"</u>) X (B: <u>90"</u>) (C: <u>90"</u>)	<input checked="" type="checkbox"/> Built-in J-Channel <input checked="" type="checkbox"/> Door Fin Relief <input checked="" type="checkbox"/> Vinyl Nailing Flange <input checked="" type="checkbox"/> Expansion Gasket	1	Thermatru Slider	Vinyl Mastic Quest