


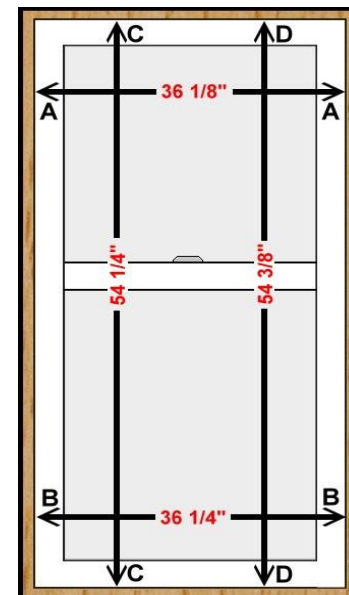

# How to Measure a Single Window Surround

1. Measure the top of the window frame from tip to tip (A) and put that dimension on the form.
2. Measure the bottom of the window frame from tip to tip (B). If B = A then you do not need to fill in the dimension on the form.
3. Measure the left side of the window frame from tip to tip (C) and put that dimension on the form.
4. Measure the right side of the window frame from tip to tip (D). If D = C then you do not need to fill in the dimension on the form.



## Sample Line

Product Part #	Window Frame Measurements	Check All That Apply	Quantity	Type of Window	Type of Siding
WS-1	(A: <u>36 1/8"</u> ) X (C: <u>54 1/4"</u> ) (B: <u>36 1/4"</u> ) X (D: <u>54 3/8"</u> )	<input checked="" type="checkbox"/> Built-in J-Channel <input checked="" type="checkbox"/> Window Fin Relief <input checked="" type="checkbox"/> Vinyl Nailing Flange <input checked="" type="checkbox"/> Expansion Gasket	3	Pella Pro	Vinyl Quest

