




Trim Solutions, LLC
Moulding the Future®

How to Measure a Half-Round Window

1. Measure tip to tip the width of the window (A) and put that dimension on the form.
2. Mark the center of the window and measure from the outside bottom edge frame of window to the outside top edge of the frame (B) and put that dimension on the form.

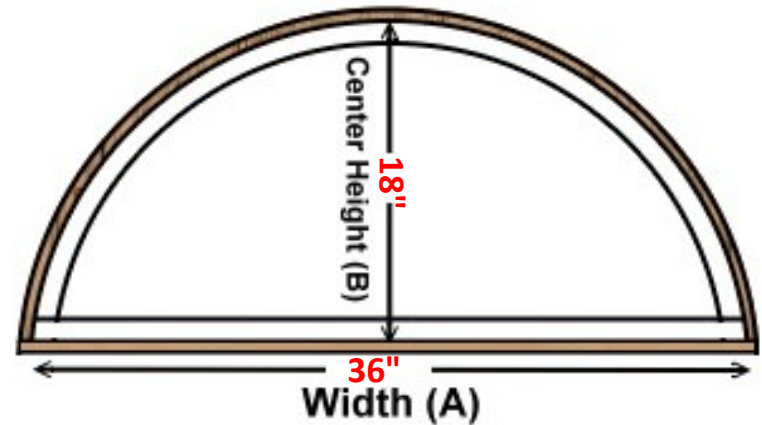

Sample Line

Half-Round Measurements	Check All That Apply	Quantity	Type of Window	Type of Siding
(A: 36") X (B: 18")	<input checked="" type="checkbox"/> Built-in J-Channel <input checked="" type="checkbox"/> Window Fin Relief <input checked="" type="checkbox"/> Expansion Gasket <input checked="" type="checkbox"/> Vinyl Nailing Flange	2	Andersen	Vinyl Mastic Quest